


COX PIRO-FLOWGAGE ORIENTATIONS FOR VERTICAL FLOW INSTRUMENTS

On this sheet are shown the various orientations that the Cox Piro-Flowgage for Vertical Pipe can have. These are critical for proper installation and use, as the hole in the brass probe must face the flow.


To better facilitate the ordering process, we have provided orientation numbers for each of the pictures shown here.

When ordering the Vertical Flowgage (Part Number CPFV) please indicate an orientation number along with the pipe size. **IF NO ORIENTATION NUMBER IS REQUESTED, THE DEFAULT IS #1**

Example: Downward flow, gage mounted on the left hand side of the pipe: Orientation #1. Example: Side mount on a horizontal pipe, flow moving away from the viewer, mounted on the right hand side: Orientation #7

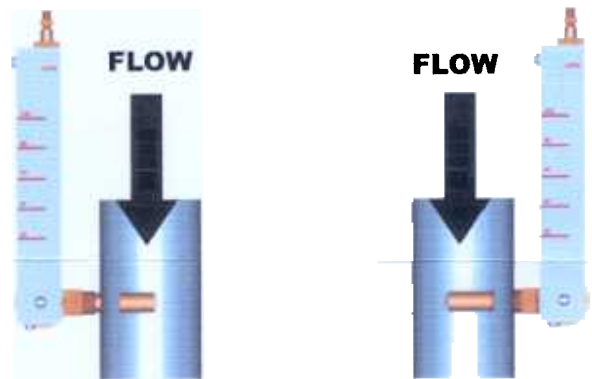

Orientation #1

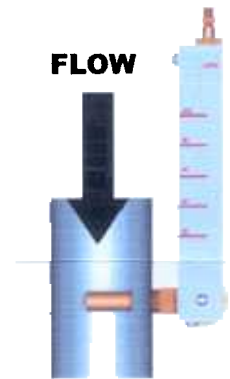


Orientation #2




Orientation #3



Orientation #4

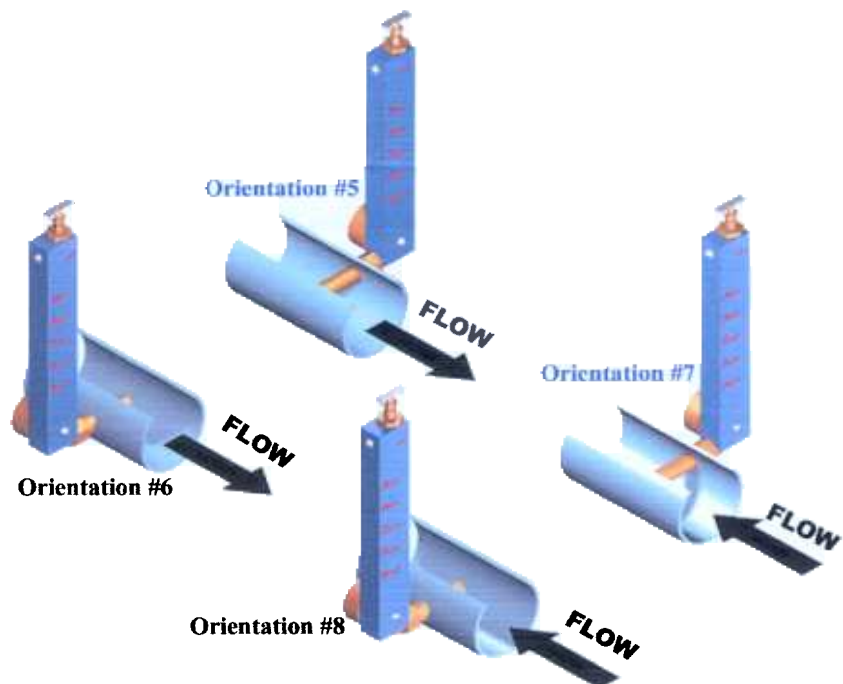

Orientation #5

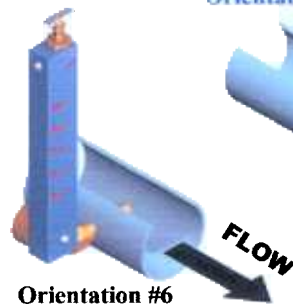

Orientation #6



Orientation #7



Orientation #8